



Heavy Duty VESA Tilt Head

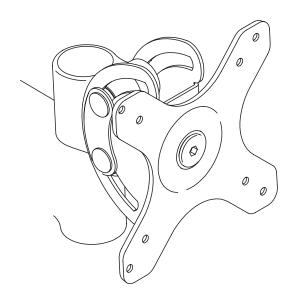

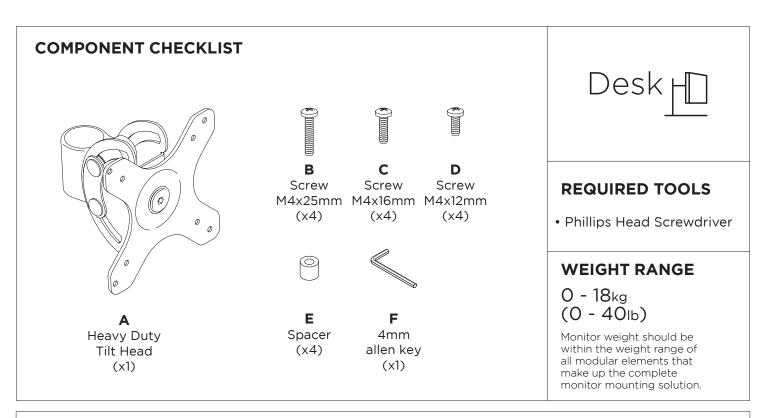


IMPORTANT INFORMATION


- ! Please ensure this product is installed as per these installation instructions.
- ! Curved monitors, deep devices (such as all-in-one PCs) and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is compatible with AWM Series monitor arm products.

1. Attach VESA head to monitor

1.1 Screw the VESA head onto monitor

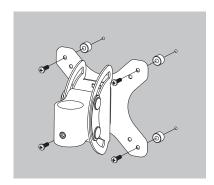

Note: Spacers may be required for curved, recessed or uneven monitor surfaces.

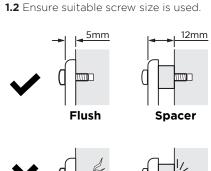

Too long

2.2 Ensure tilt head is fully pushed

onto shaft.


Spacer


Note: For other sizes, use a suitable adaptor plate

1.3 VESA mounting compatibility

2. Mount monitor onto arm


2.1 Push tilt head onto the shaft at the end of the monitor arm.

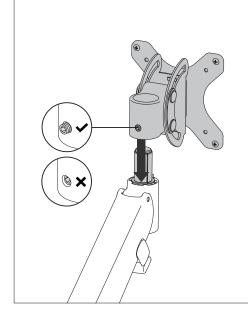

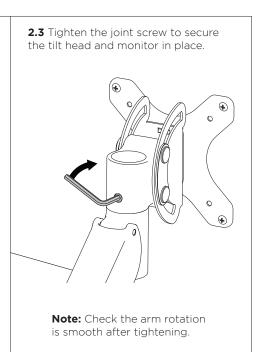

3. Adjust tilt tension

3.1 Use the knob to tighten and loosen the tilt tension to suit your monitor weight.

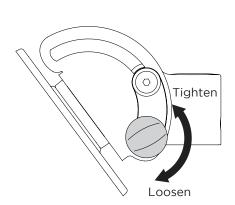

Note: Always support the monitor whilst adjusting to prevent it from falling forward sharply.