
 



Freestanding HD Dual Vert

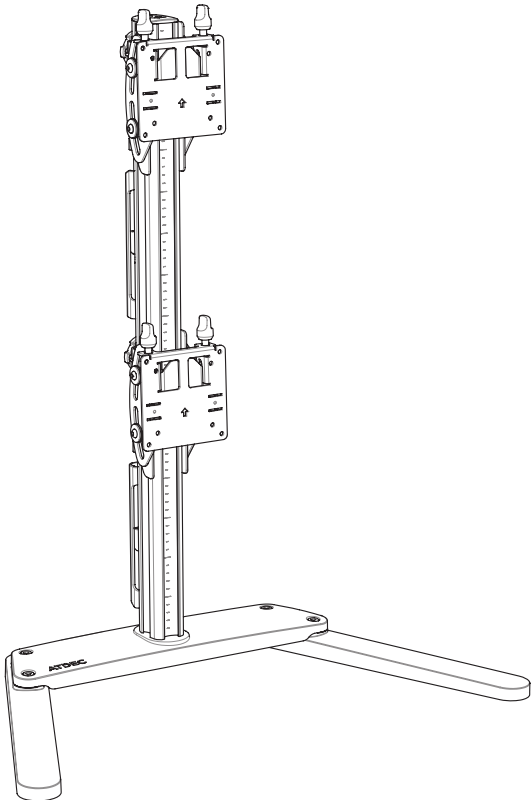


COMPONENT CHECKLIST



A
Post
(x1)

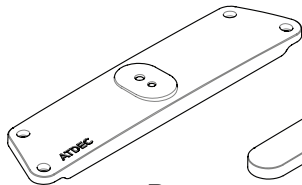


B
Bridge
(x1)

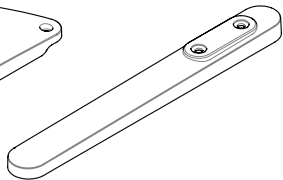


C
Leg
(x2)



 D
Bracket
(x2)



E
VESA Plate
(x2)

 

F
6mm
Hex Key
(x1)



 
G
M8x30mm
Cap Screw
(x4)



H
M8 Nut
(x4)



I
M8 Washer
(x2)



J
M8x80
Cap Screw
(x2)



K
Post Cap
(x1)



L
M4x10 Screw
(x8)



M
M4x20 Screw
(x8)



N
10mm Spacer
(8x)



REQUIRED TOOLS

- Phillips Head Screwdriver

CAPACITY

Flat Monitor
0 - 25kg (0 - 55lb)

Curved Monitor
0 - 18kg (0 - 39lb)

Display Size
17" - 55"
300mm (12") max overall
display depth


IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! Each Bracket supports a maximum weight as per above weight range specification.
- ! This product supports VESA mounting hole configurations: 75x75mm and 100x100mm.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! VESA mounted accessories (such as mini PC brackets and mounts), and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.
- ! **WARNING** Death or serious injury may occur if a child climbs on or tips product. Anchor product if applicable. Never place product in an unstable location. Never place remote control or toys on top of monitors.

1. Assemble Base

1.1 Align Bridge and Leg holes. Use 6mm hex key.


Hold M8 nut in hexagonal recess until M8x30 Cap screw engages. Tighten screw.

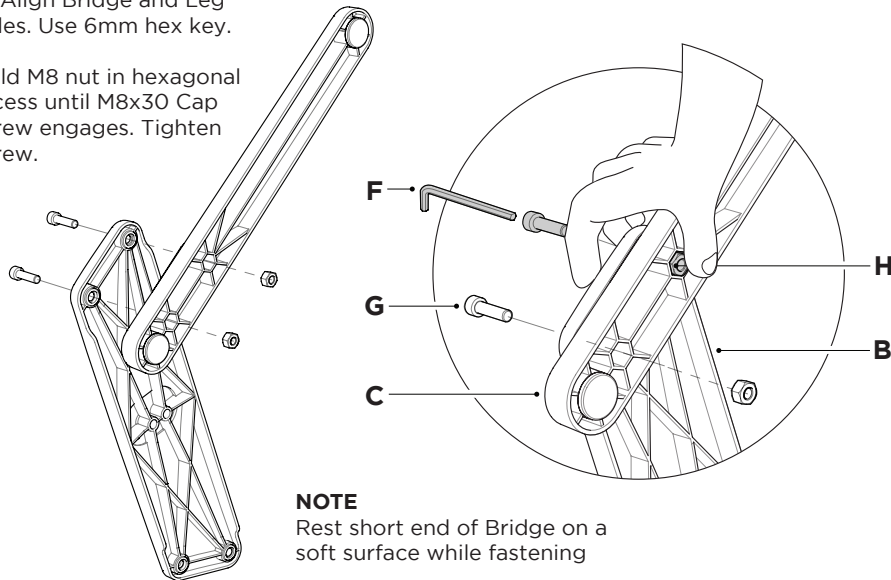

NOTE


Rest short end of Bridge on a soft surface while fastening

1.2 Repeat on opposite leg.

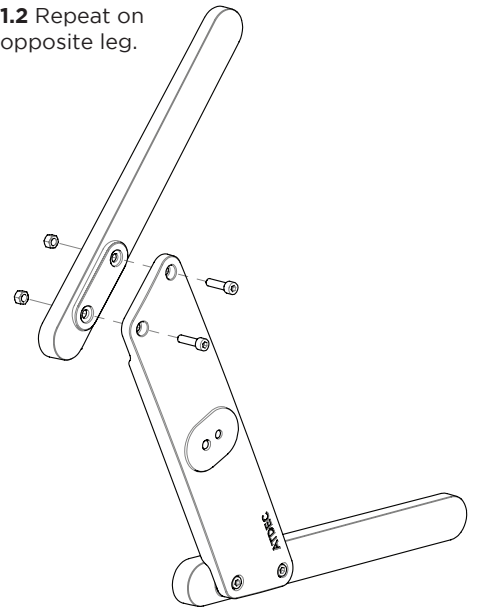

2. Attach Post to Base


2.1 Insert M8x80 Cap head screw through M8 washer and holes in Base and fasten in Post. Repeat step with other screw before tightening both screws.

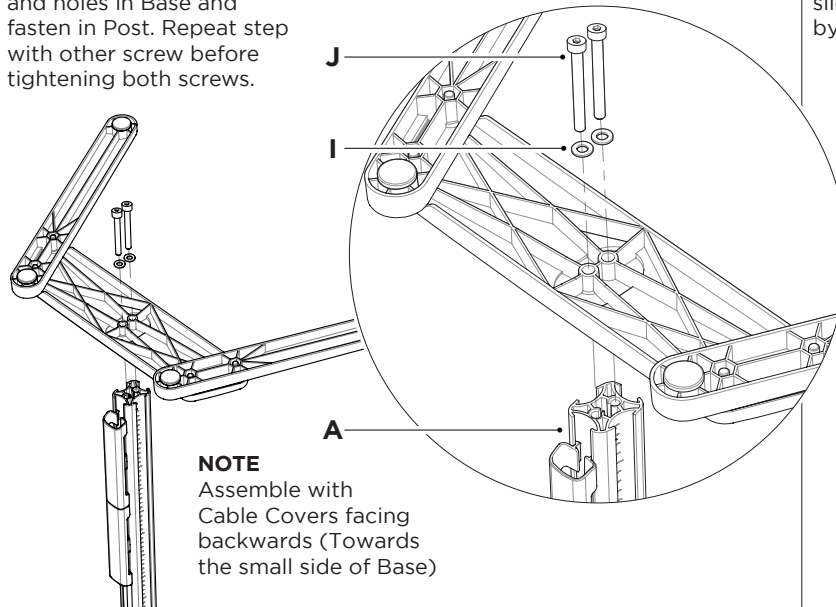

NOTE


Assemble with Cable Covers facing backwards (Towards the small side of Base)

2.2 Remove clips and covers from post by sliding up and out or by squeezing sides.

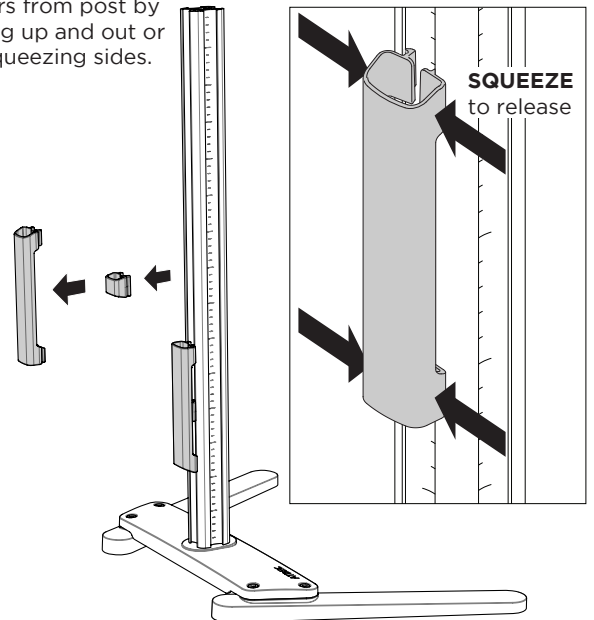


3. Slide Brackets onto Post and Set Height

3.1 Line up the inner guide on rear of bracket with rear channel on post. Slide inner guide into channel, then lower bracket.

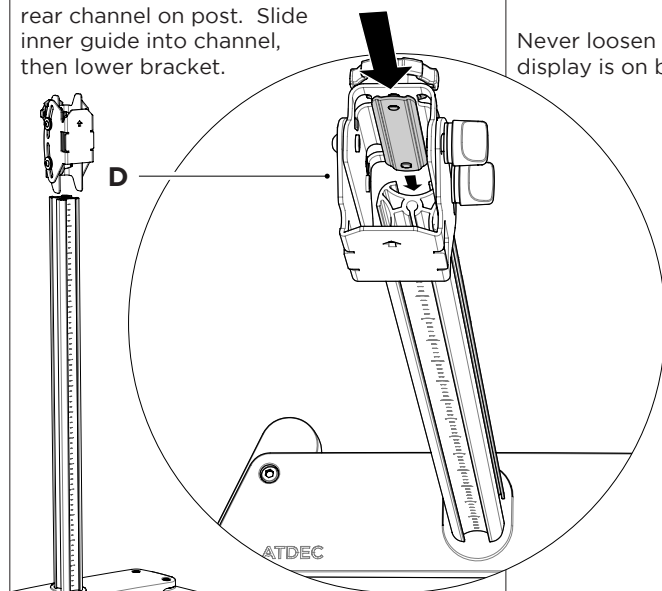


3.2 Firmly tighten hand knob at chosen height.

Never loosen knob while display is on bracket.

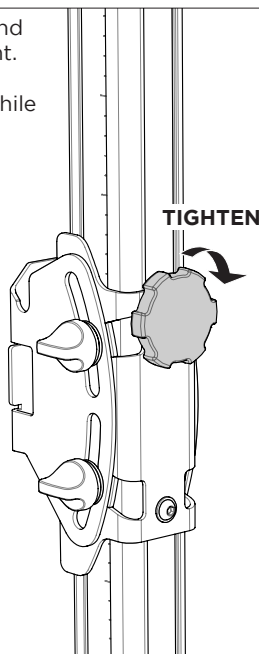

3.3 Repeat Steps 3.1 to 3.2 with second Bracket.

Fit Post Cap.

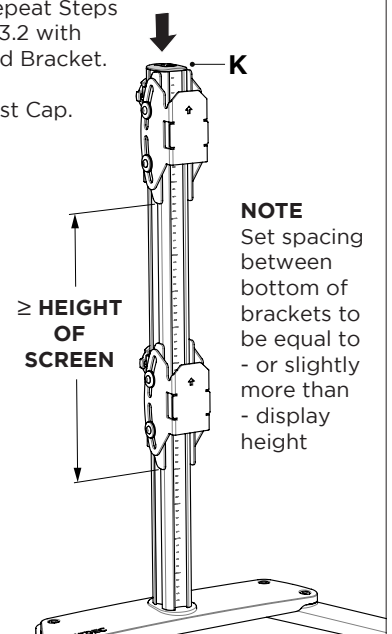


NOTE

Set spacing between bottom of brackets to be equal to - or slightly more than - display height

≥ HEIGHT OF SCREEN


4. Attach VESA Plates to Displays

4.1 VESA mount compatibility

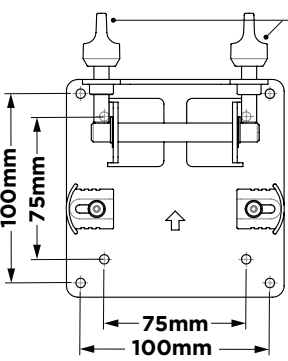


NOTE
For 75mm VESA unscrew 5mm to access top holes

4.2 Attach VESA Plate with M4x10 screws.

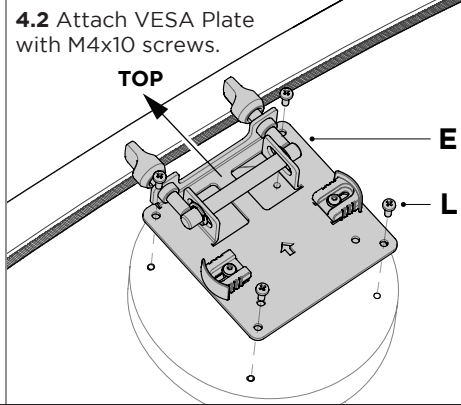

OR For recessed VESA use 10mm Spacers and M4x20 screws.

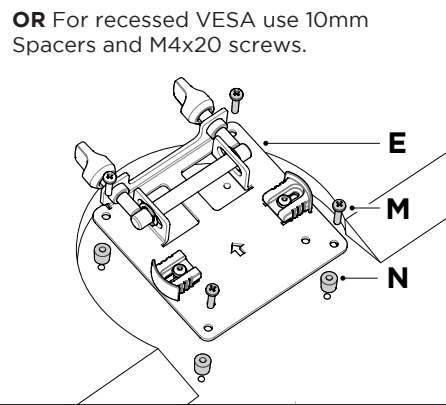


5. Mount Bottom Display

5.1 Set VESA plate to open position.


Bottom Display must be mounted on bracket first.

Use two people for wide or heavy display.

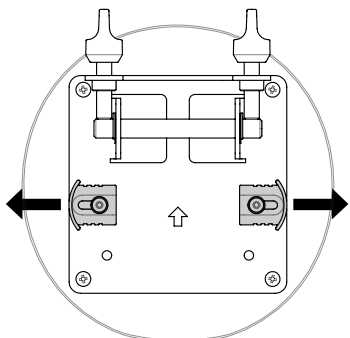


OPEN

5.2 Lift display until Vesa Plate is above the Bracket.

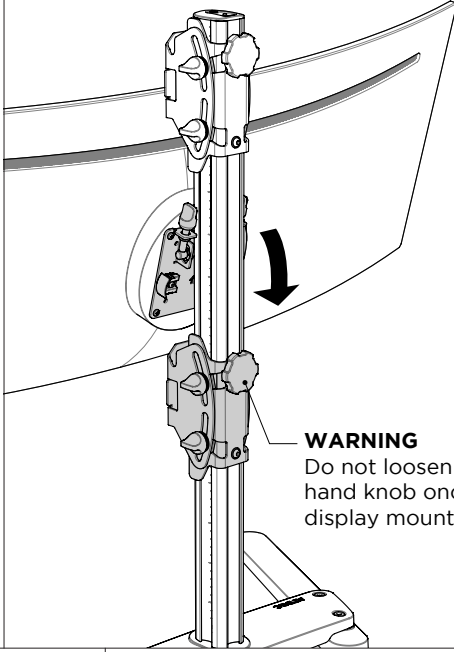


WARNING
Do not loosen hand knob once display mounted.

5.3 Centre VESA close to post and slowly lower until bar on VESA Plate sits in saddle in bracket.

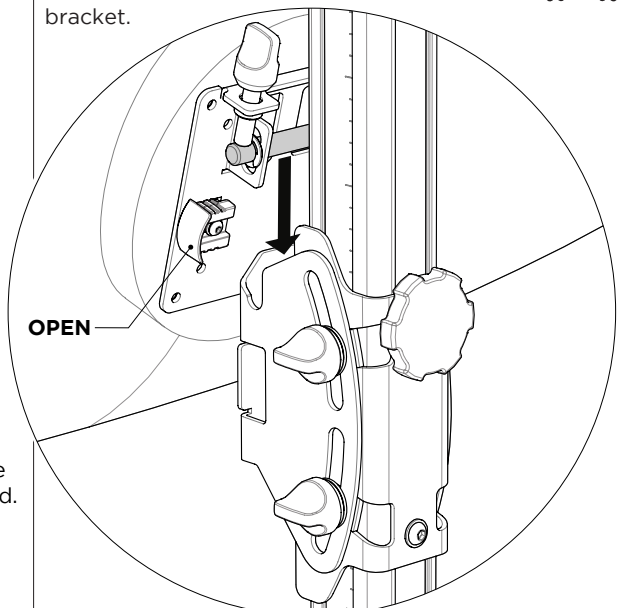


OPEN

5.4 Set VESA Plate to closed position by sliding clips on both sides inwards

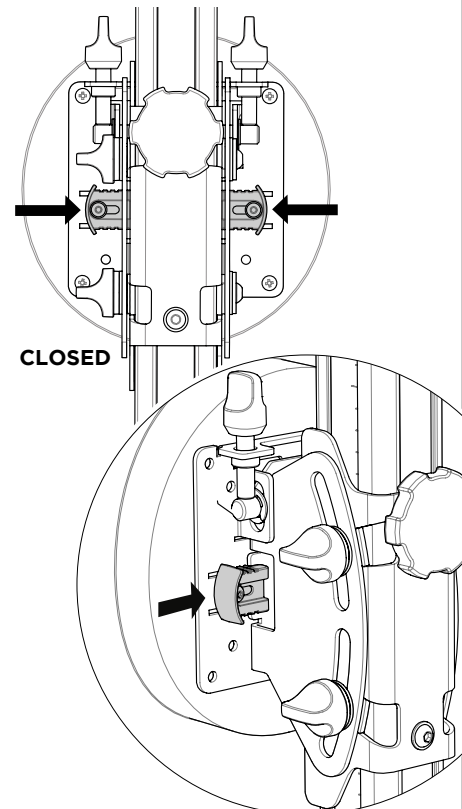


CLOSED

5.5 Adjust Display tilt angle by gripping edges of screen and rolling up or down to desired position.

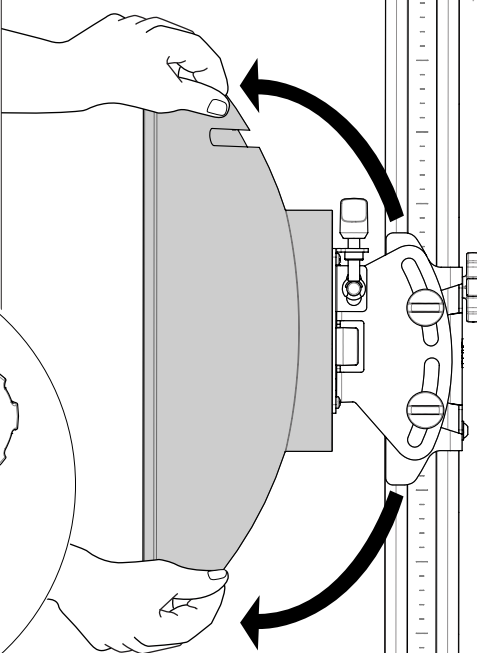

5.6 Set Display angle by tightening Tilt Knobs.

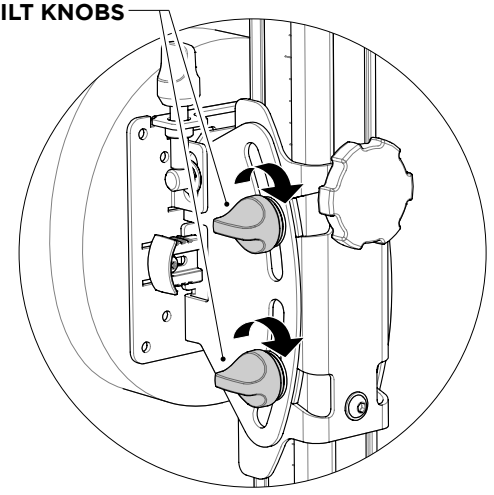

TILT KNOBS

6. Mount Top Display

6.1 Check that distance between Brackets is equal to or greater than the height of the Display.

Repeat Step 5 to secure top Display and set tilt angle.

i

Lower

ii

Close

iii

Adjust angle

iv

Set angle

ii

LHS & RHS

iv

TOP & BOTTOM

7. Fine Adjustment

7.1 To correct horizontal angle of display +/- 3 °:

Turn a single fine adjustment knob to adjust angle of screen.

Clockwise = Higher
Anti-clockwise = Lower

7.2 To close small gap between displays +/-6mm (1/4"):

Turn both fine adjustment knobs - alternating sides a few rotations at a time.

Clockwise = Higher
Anti-clockwise = Lower

FINE ADJUSTMENT KNOBS

NOTE
Ensure clips are in **CLOSED** position after fine adjustment complete

8. Manage Cables

8.1a Load cables into cable clip.

8.1b Insert one side of the cable clip into a channel on the post, then push in the other side.

8.2a Load cables into cable cover.

8.2b Clip the cable cover back onto rear post channels.

Cables can exit from the side of the cable cover