



AWM Heavy Duty 460 Arm

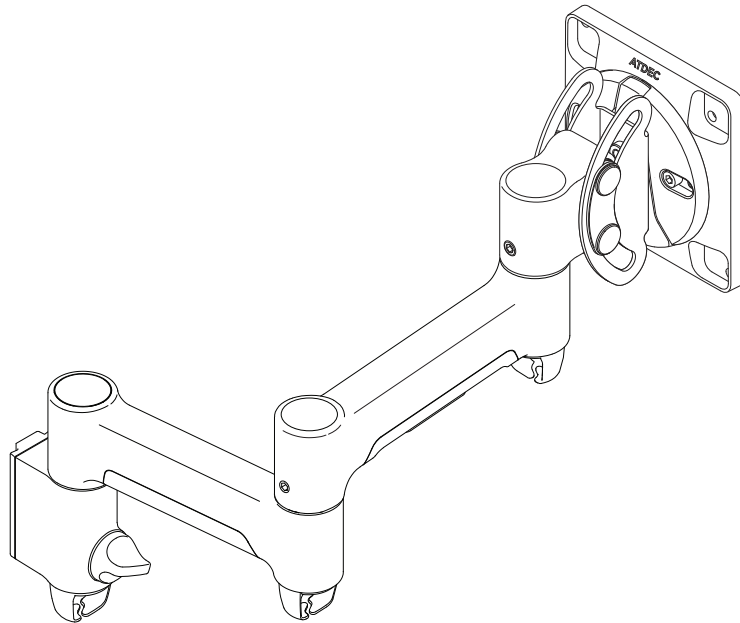

COMPONENT CHECKLIST

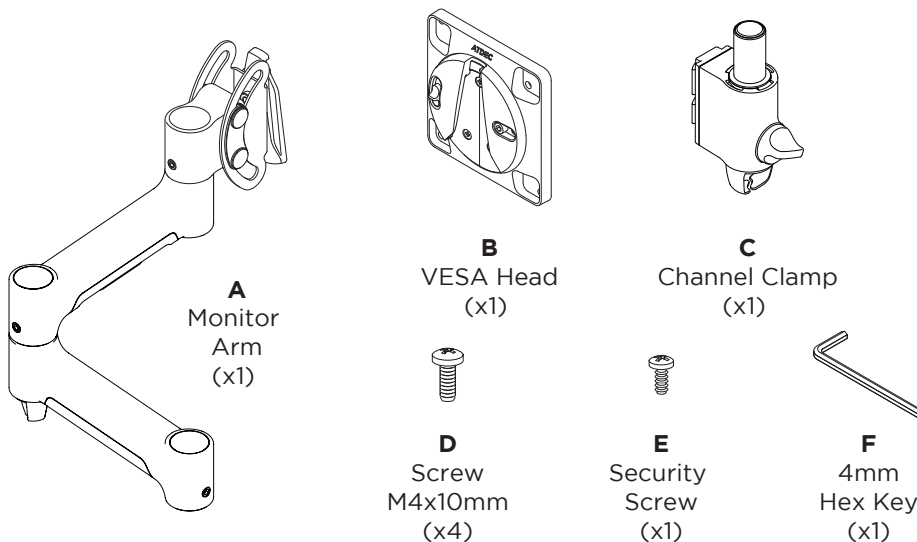

Desk

REQUIRED TOOLS

- Phillips Head Screwdriver

WEIGHT RANGE

Flat Monitor

0 - 14kg
(0 - 31lbs)

Curved Monitor


0 - 12kg
(0 - 26.5lbs)

Monitor weight should be within the weight range of all modular elements that make up the complete monitor mounting solution.

IMPORTANT INFORMATION


- ! Please ensure this product is installed as per these installation instructions.
- ! Do not remove/ throw away the black plastic sleeve on the channel clamp or arm links.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is not suitable for outdoor use or mobile applications.
- ! Do not over-tighten screws and adjustment points on product.
- ! This product is **not** compatible with the Atdec AWM Wall Channel products (including AWM-WS Slat Wall Adaptor, AWM-W6 60 Wall Channel, and AWM-W35 350 Wall Channel).
- ! VESA mounted accessories (such as mini PC brackets and mounts), offset VESA locations, and unevenly weighted monitors (relative to the center of the VESA mounting interface) exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.

1. Fix channel clamp to post

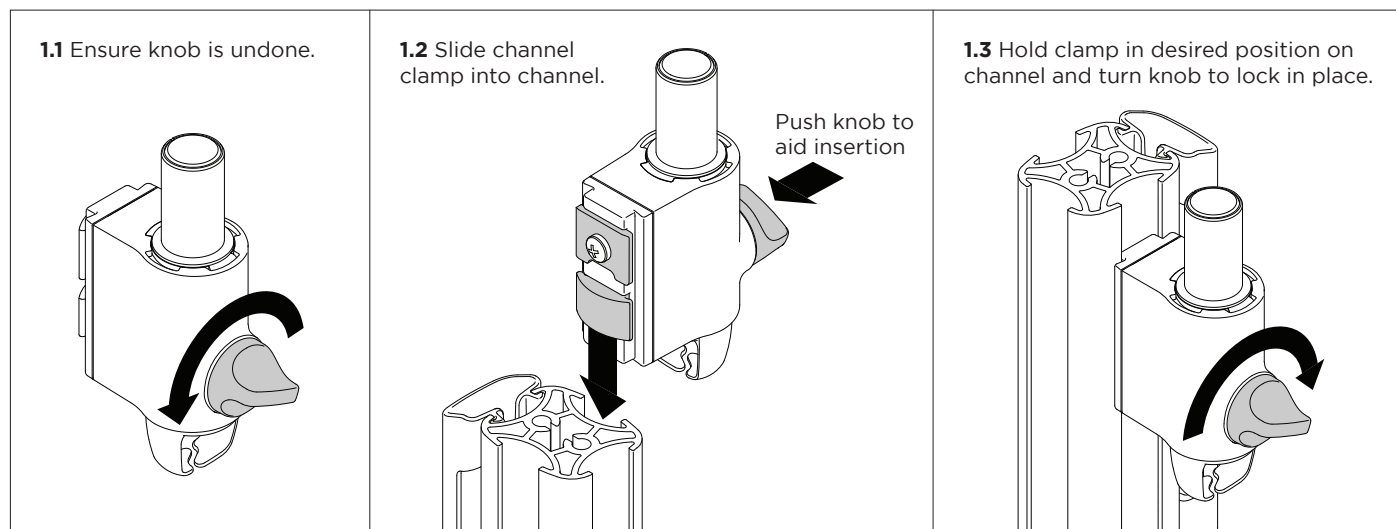


2. (OPTIONAL) Set arm rotation to 180°

NOTE: Rotation is set to 360° by default.

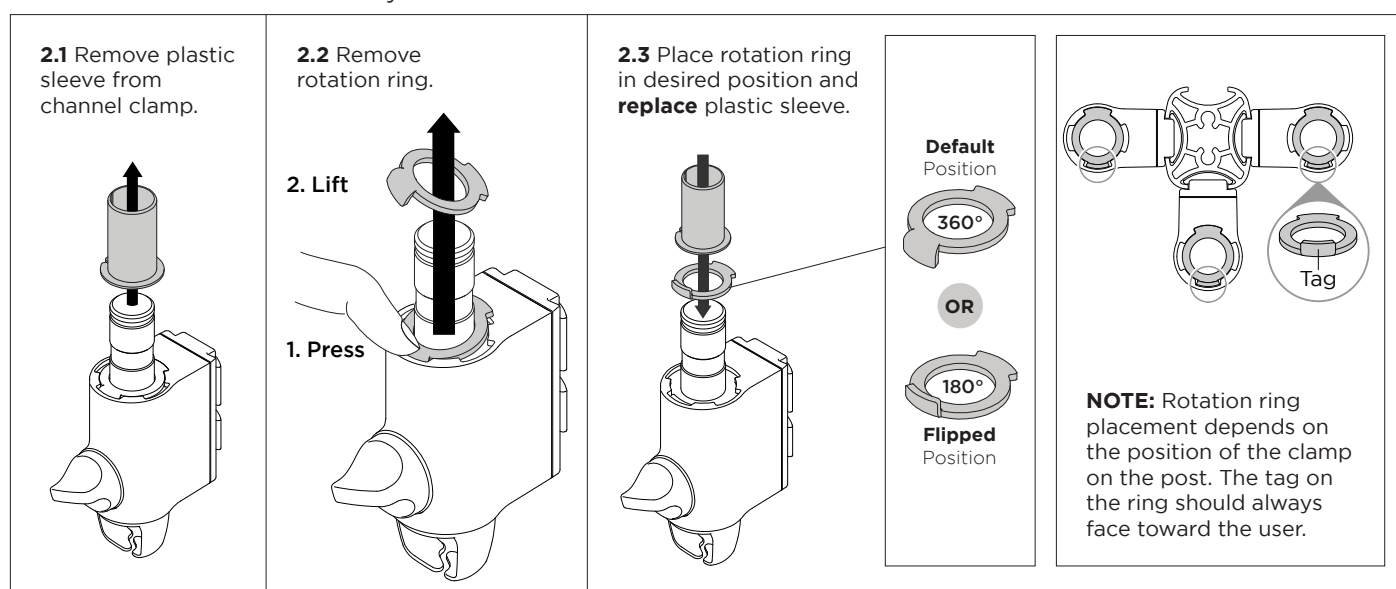


3. Fit arm onto channel clamp

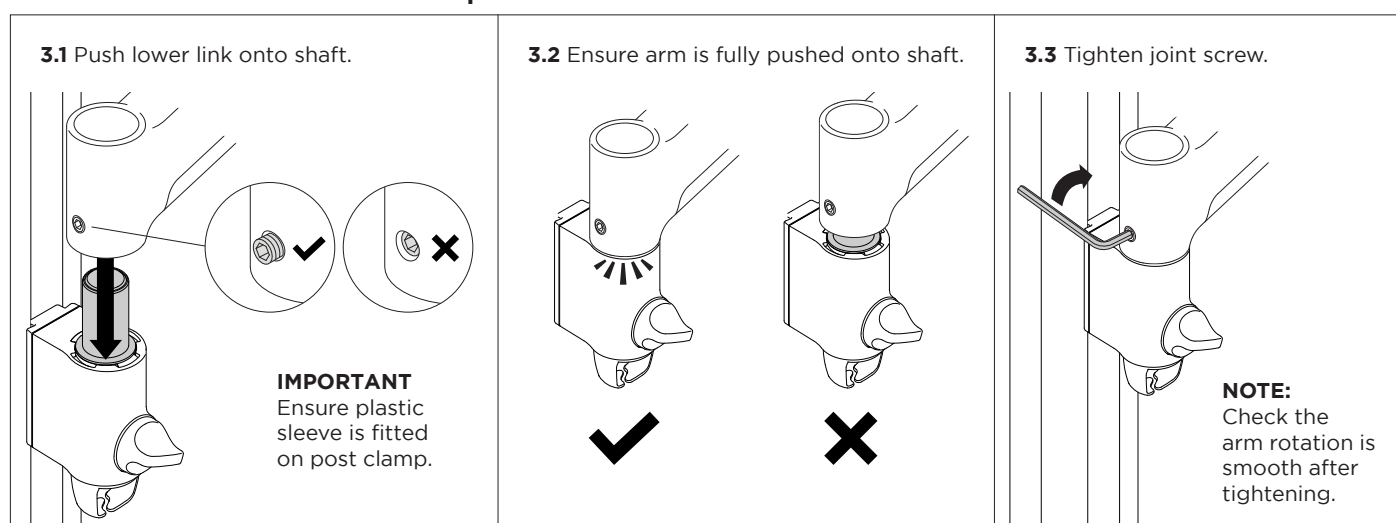

4. Attach VESA head to monitor

4.1 Check VESA mounting compatibility of monitor

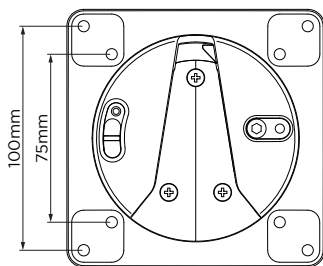


NOTE: Ensure screw length suits the monitor VESA mounting holes.


OK




Too long

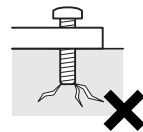


Too short

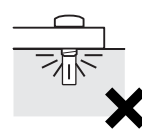


4.2 Attach VESA head onto monitor with provided screws. (Alternatively, use fasteners specified by the monitor manufacturer.)

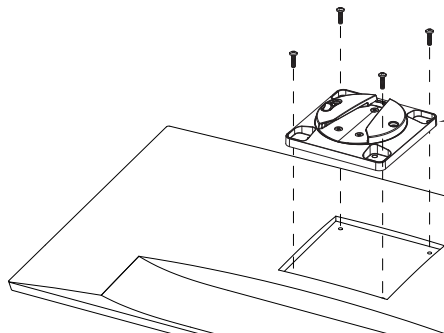

NOTE: Recessed 75x75 VESA interfaces will require a Spacer Kit (sold separately)

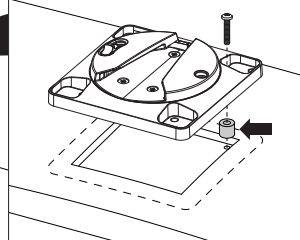



TIP! To allow monitor to be rotated upside down, mount VESA head in the alternate orientation shown.

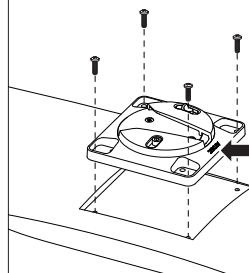

NOTE: Logo position

5. Attach monitor to arm


5.1 Fit monitor onto arm.

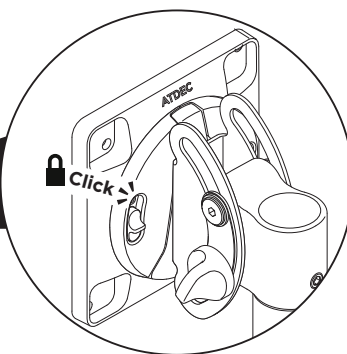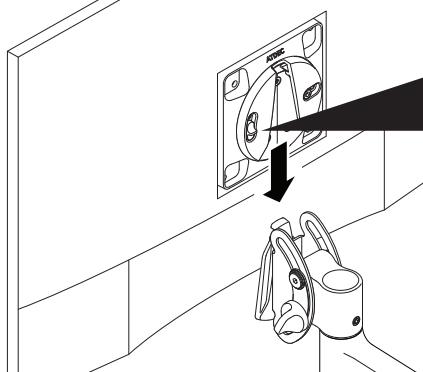

NOTE: VESA Head will automatically latch onto the tilt link.


5.2 OPTIONAL SECURITY SCREW

If desired, once monitor is attached to the arm, install the security screw which disables the release switch.

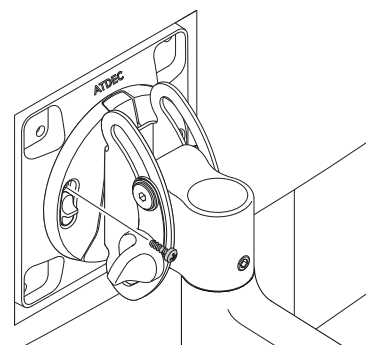


6. Adjust tilt tension


6.1 Adjust the tilt tension by using the knob.

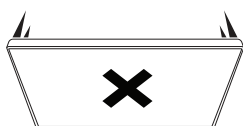


DROOPS FORWARD

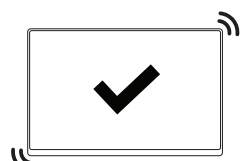

HOLDS POSITION

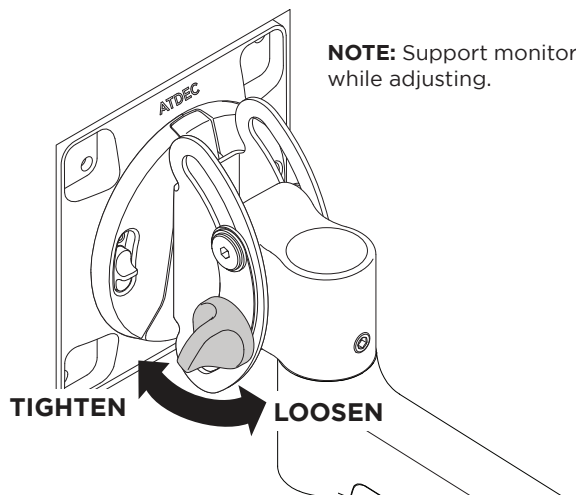


NOTE: Support monitor while adjusting.

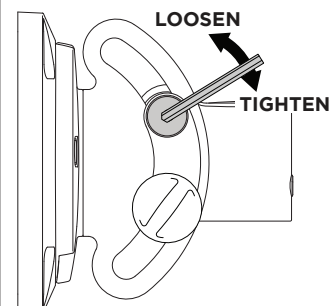


NOTE: If more tension is required, use the 4mm hex key to tighten tilt screw.

7. (OPTIONAL) Adjust rotation tension


7.1 Adjust the rotation tension using 4mm hex key.
Adjustment may only be required for ultrawide monitors.

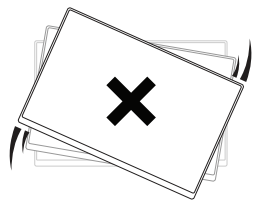

DRIFTS

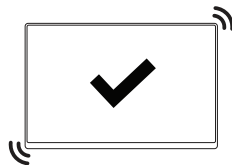


HOLDS POSITION

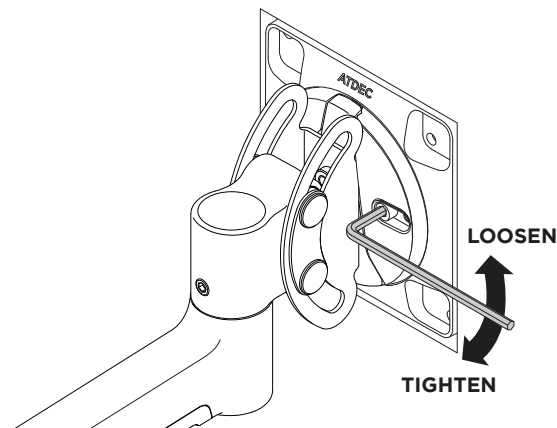

8. (OPTIONAL) Adjust rotation tension

8.1 Arm movement can be adjusted to be firmer or more free. Use the 4mm hex key to adjust the tension of the pivot joints on the arm.


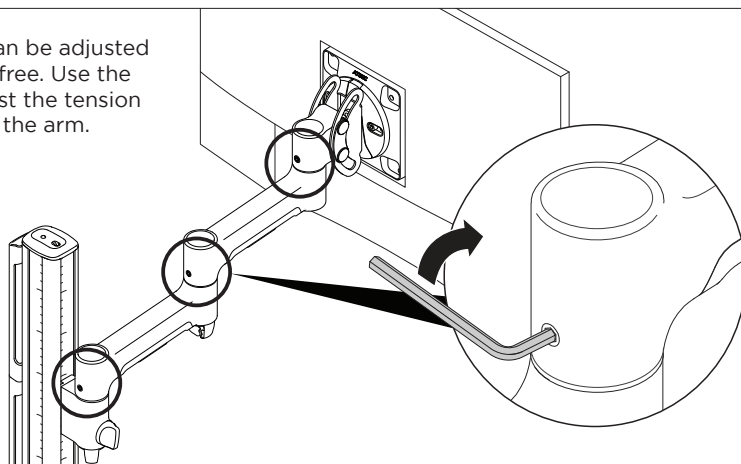


DO NOT OVERTIGHTEN

Increasing tension only stiffens movement and cannot lock off arm movement.

9. Cable management

9.1 Plug cables into the monitor and route the cables down the arm using the cable hooks and clips.

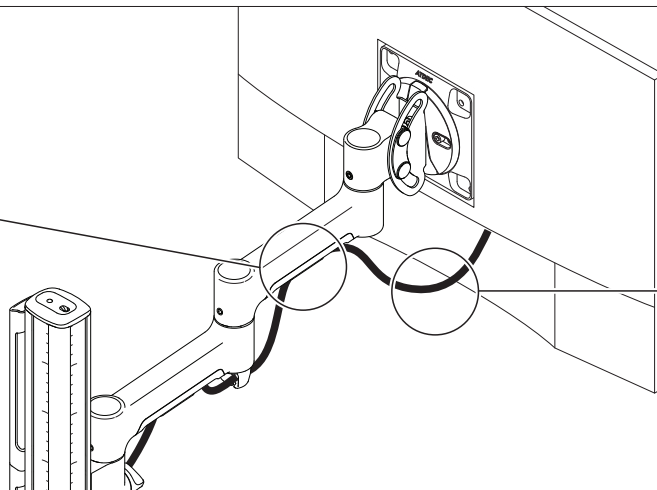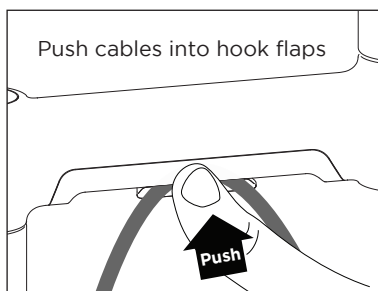

Ensure enough cable slack is given to allow for movement of the monitor

10. Removing monitor

10.1 Slide release switch up and click into unlocked position, then lift monitor away from the arm.

