



AWM 460 Arm

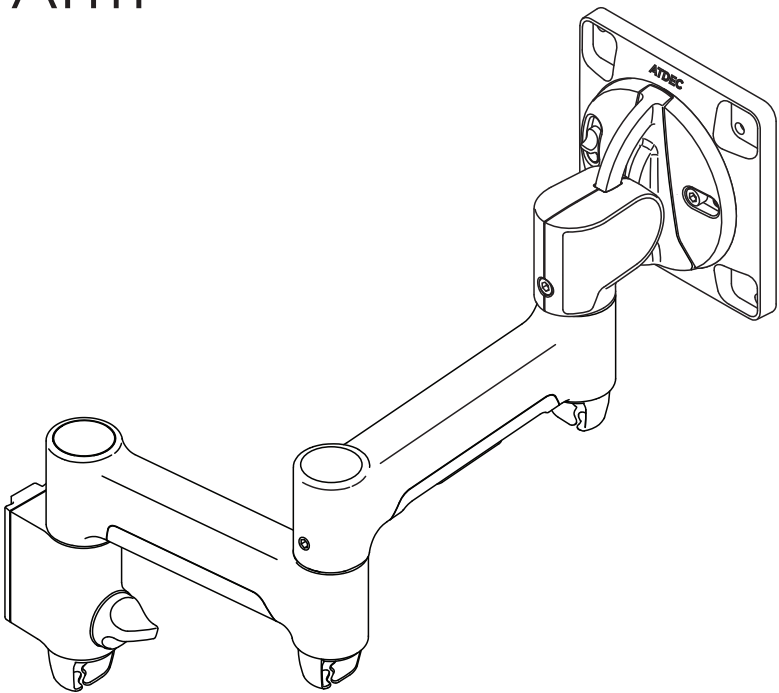

COMPONENT CHECKLIST

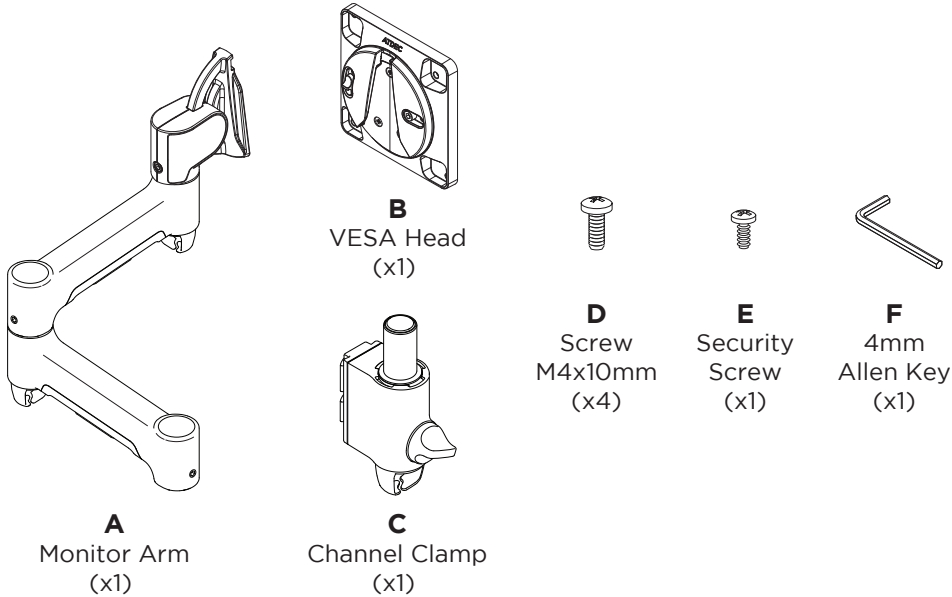

REQUIRED TOOLS

- Phillips Head Screwdriver

WEIGHT RANGE

Flat Monitor

0 - 12kg
(0 - 26.5lb)

Curved Monitor

0 - 10kg
(0 - 22lb)




Curved monitors with an overall depth up to 140mm (5.5").

Monitor weight should be within the weight range of all modular elements that make up the complete monitor mounting solution.





IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! Do not remove or throw away the plastic sleeve on the channel clamp.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is compatible with Atdec AWM Series Posts and Wall Channels
- ! This product is not suitable for outdoor use or mobile applications
- ! Do not over-tighten screws and adjustment points on product.
- ! VESA mounted accessories (such as mini PC brackets and mounts), and offset VESA locations, and unevenly weighted monitors (relative to the center of the VESA mounting interface) exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.




1. Fix channel clamp to post or wall channel

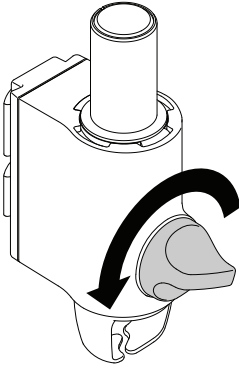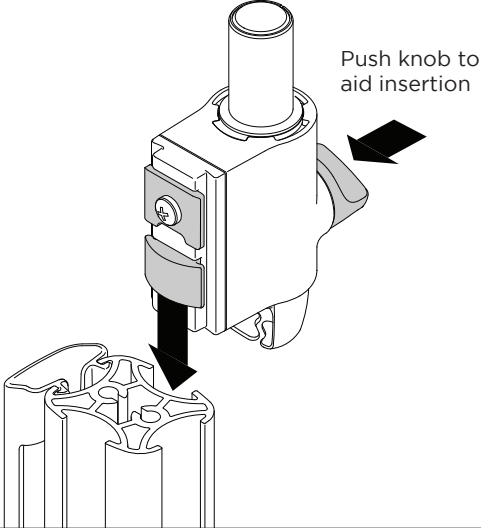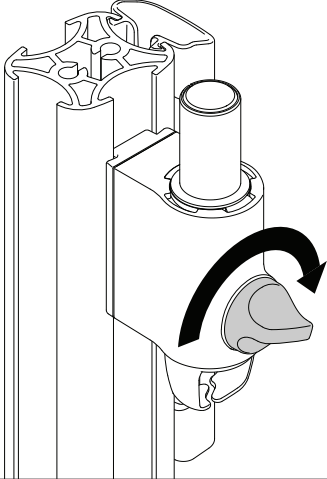1.1 Ensure knob is undone. 	1.2 Slide channel clamp into channel. 	1.3 Hold clamp in desired position on channel and turn knob to lock in place. 
---	--	--

2. OPTIONAL Set arm rotation to 180°
Note rotation is set to 360° by default.

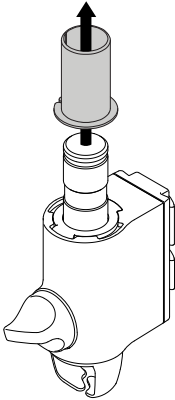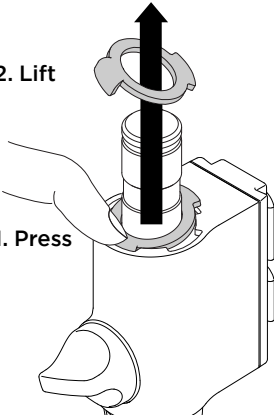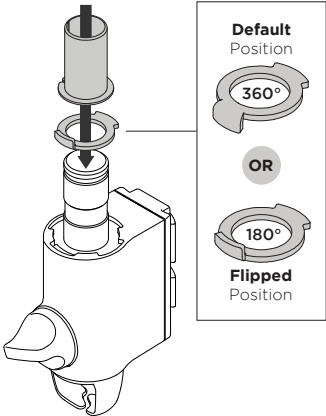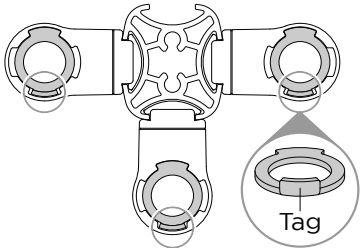
2.1 Remove plastic sleeve from channel clamp. 	2.2 Remove rotation ring. 2. Lift 1. Press 	2.3 Place rotation ring in desired position and replace plastic sleeve  Note: rotation ring placement depends on the position of the clamp on the post. The tag on the ring should always face toward the user. 
---	--	--

3. Fit arm onto channel clamp

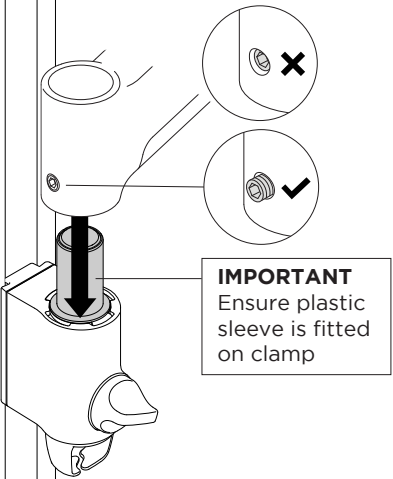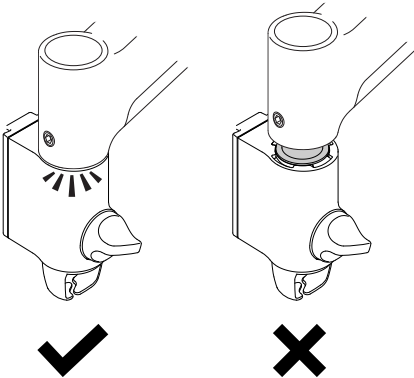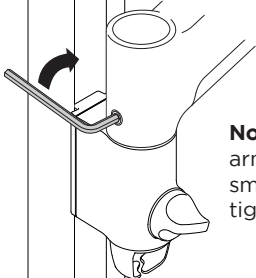3.1 Push arm onto shaft. 	3.2 Ensure arm is fully pushed onto shaft. 	3.3 Tighten joint screw.  Note: Check the arm rotation is smooth after tightening.
---	--	--


4. Attach VESA head to monitor

4.1 Check VESA mounting compatibility of monitor

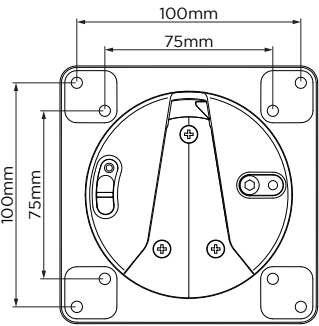


Note: For other sizes, use a suitable adaptor plate (sold separately).

4.2 Attach VESA head onto monitor with provided screws. (Alternatively, use fasteners specified by the monitor manufacturer)

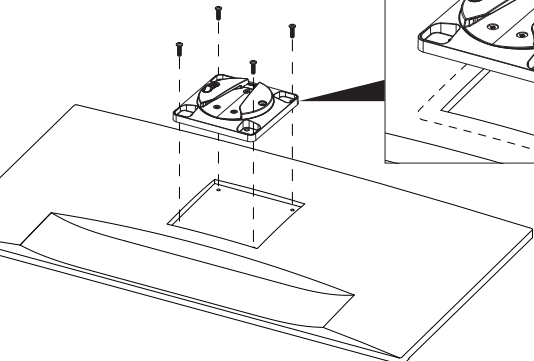

Note: Recessed 75x75 VESA interfaces will require a Spacer Kit (sold separately)

Note: ensure screw length suits the monitor VESA mounting holes.

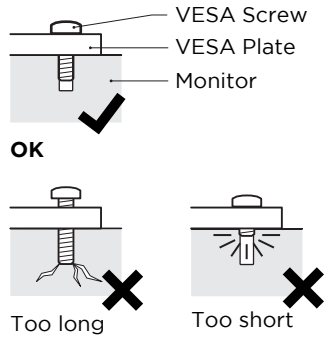

VESA Screw
VESA Plate
Monitor


OK

Too long

Too short


5. Attach monitor to arm

5.1 Fit monitor onto arm

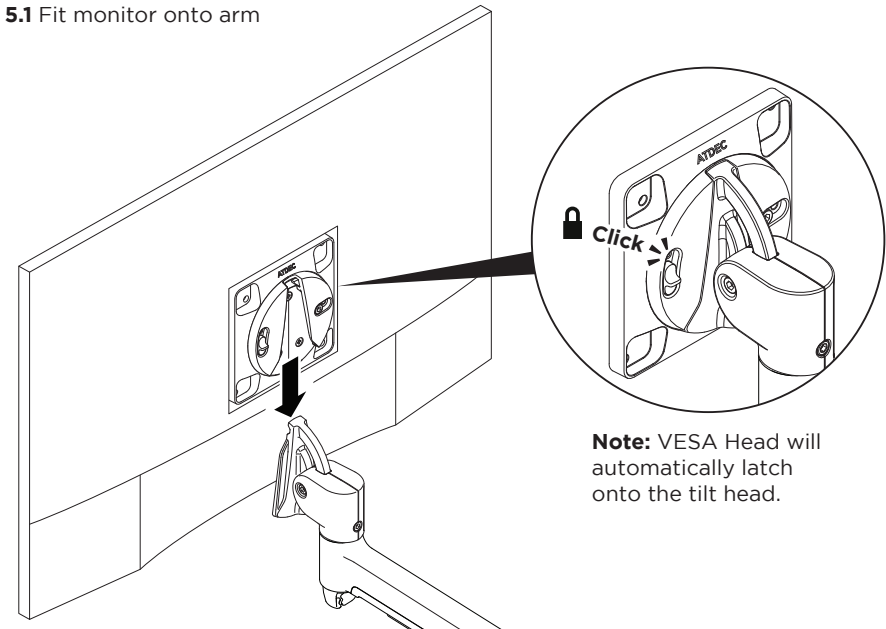


Note: VESA Head will automatically latch onto the tilt head.

5.2 OPTIONAL SECURITY SCREW
If desired, once monitor is attached to the arm, Install the security screw. This disables the release switch, preventing theft.

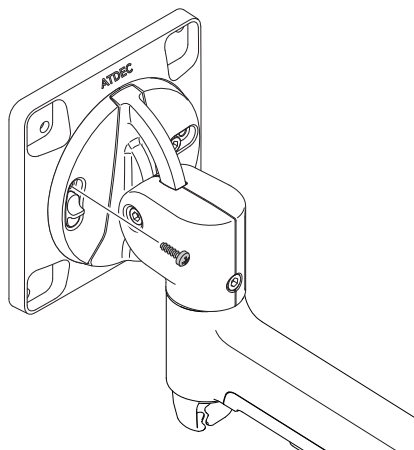

6. Monitor arm cable management

6.1 Plug cables into the monitor and route the cables down the arm using the cable hooks and clips

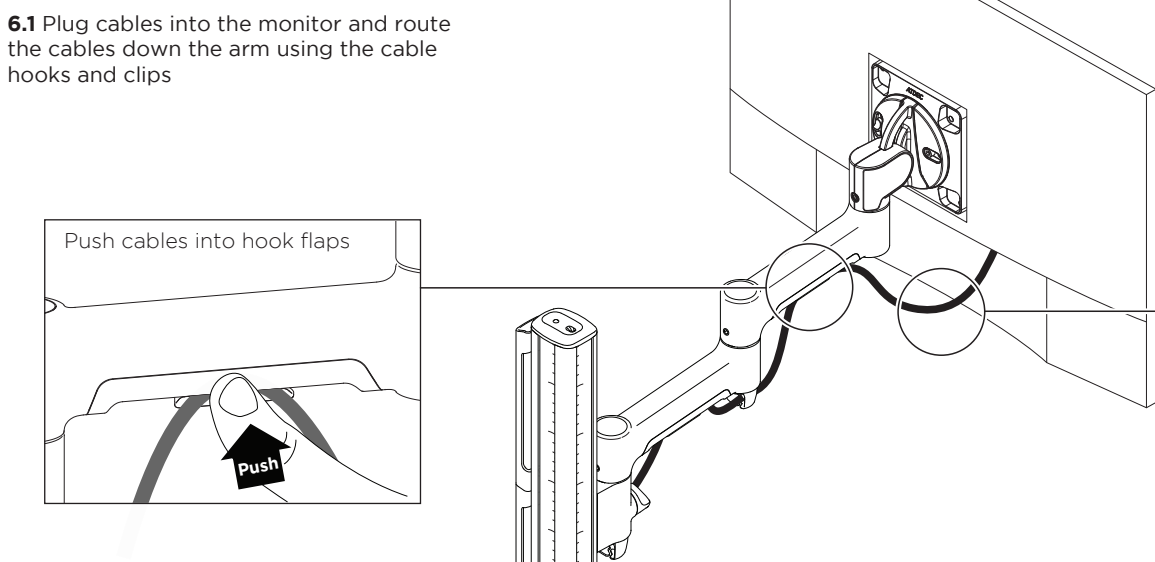


Push cables into hook flaps

Push

Ensure enough cable slack is given to allow for movement of the monitor

7. OPTIONAL Adjust tilt tension


7.1 Factory set tilt tension will be suitable for most monitors.
If required, adjust the tilt tension using the 4mm hex key.

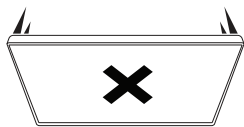

DROOPS FORWARD




HOLDS POSITION

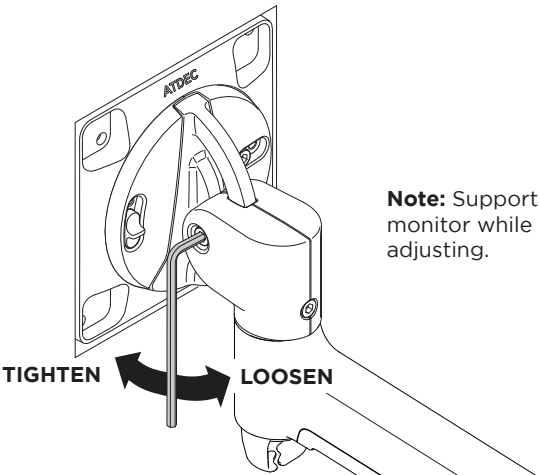


Note: Support monitor while adjusting.

8. OPTIONAL Adjust rotation tension


8.1 Tune the rotation tension using 4mm hex key.
Adjustment may only be required for ultrawide monitors.

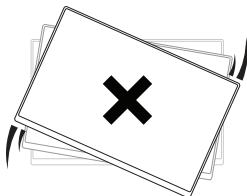

DRIFTS

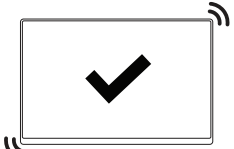


HOLDS POSITION

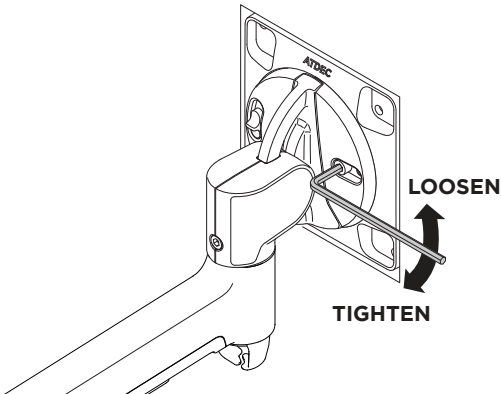

9. OPTIONAL Adjust arm joint tension

9.1 Arm movement can be adjusted to be firmer or more free. Use the 4mm hex key to adjust the tension of the three pivot joints on the arm.

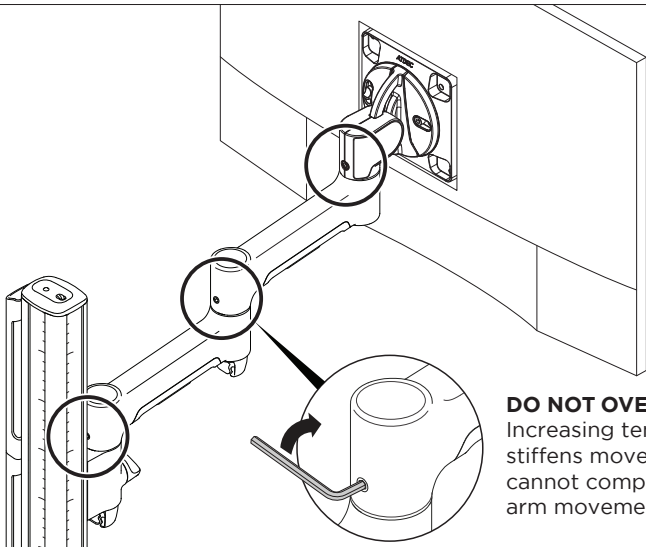

DO NOT OVERTIGHTEN
Increasing tension only stiffens movement and cannot completely stop arm movement.

10. Removing monitor

10.1 Slide release switch up and click into unlocked position, then lift monitor away from the arm.

