



Installation Guide AWM-N

Laptop Tray

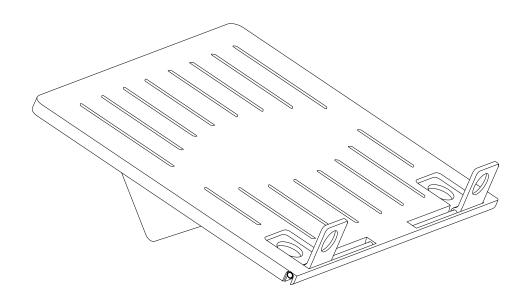


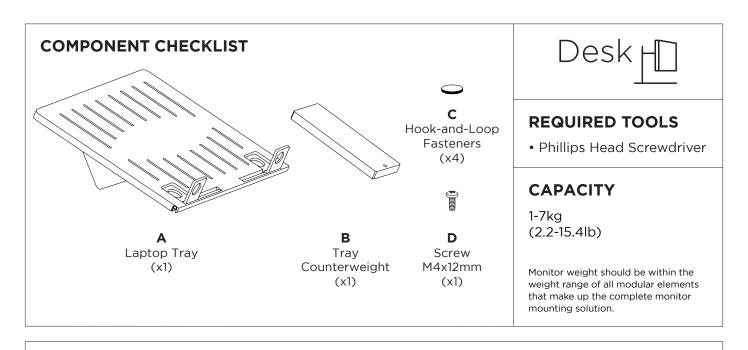


IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is not suitable for outdoor use or mobile applications.
- ! Do not over-tighten screws and adjustment points on product.
- ! Periodic adjustment to counterbalance and tilt tension may be required.
- ! VESA mounted accessories (such as mini PC brackets and mounts), offset VESA locations, and unevenly weighted monitors (relative to the center of the VESA mounting interface) exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.


1. Attach rotation limit screw to VESA head

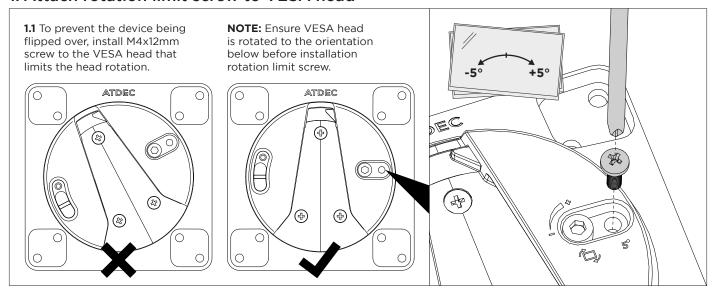


2. Insert tray counterweight into tray

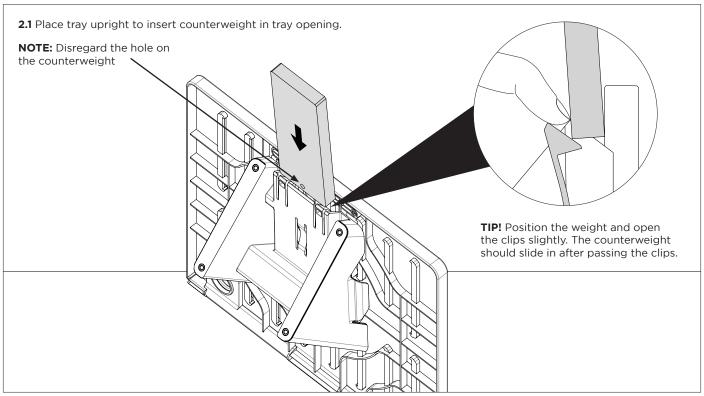


3. Attach VESA head to Laptop Tray

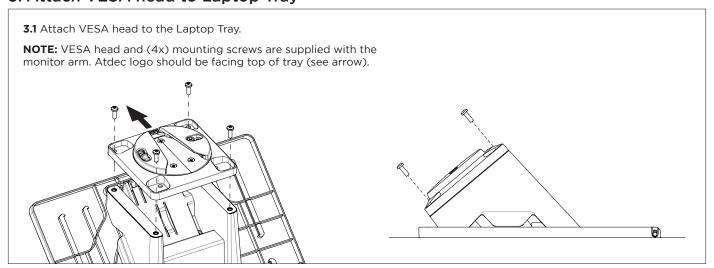


4. Attach Laptop Tray onto arm

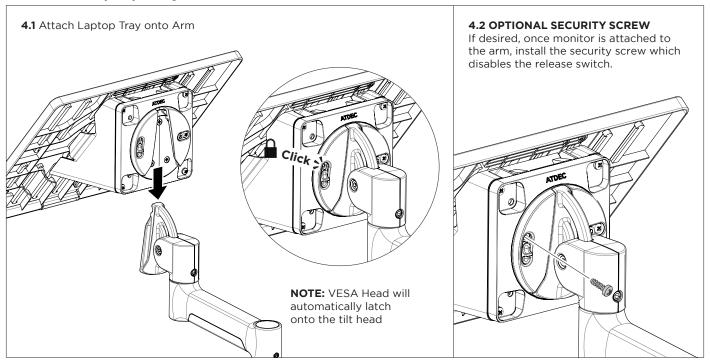

5. Mount laptop to Laptop Tray

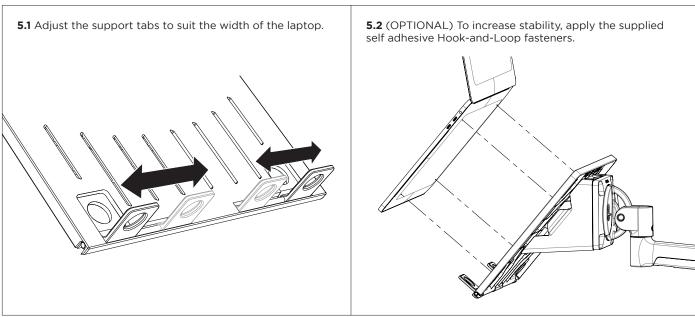

6. Cable management

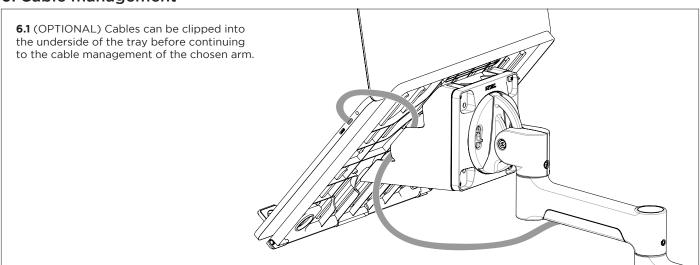

7. Adjustments

