



Post Mounted Heavy Duty Monitor Mount

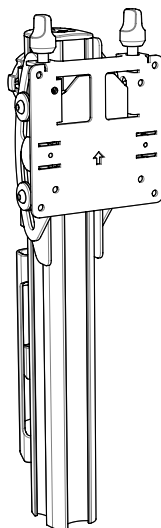


COMPONENT CHECKLIST



A
Post
(x1)



B
Bracket
(x1)



C
VESA Plate
(x1)



D
Post Cap
(x1)



E
4mm
Hex Key
(x1)



F
5mm
Hex Key
(x1)



G
M8x60mm
Screw
(x2)



H
M4x10mm
Screw
(x4)



I
M4x20mm
Screw
(x4)



J
10mm
Spacer
(x4)

Desk 

REQUIRED TOOLS

- Phillips Head Screwdriver

CAPACITY

Flat Monitor

4.5 - 25kg
(10 - 55lb)

Curved Monitors

4.5 - 18kg
(10 - 40lb)

Display Size

24" - 55"
300mm (12") max
overall display depth

IMPORTANT INFORMATION

! **Product should only be assembled and used as per these installation instructions.**

! The manufacturer accepts no responsibility for incorrect installation.

! Each Bracket supports a maximum weight as per above capacity specification.


! This product is not suitable for outdoor use.

! Do not use this product for mobile applications.


! VESA mounted accessories (such as mini PC brackets and mounts), and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.

1. Attach post to fixing (fixing sold separately)


1.1 Follow the installation guide provided with the fixing to attach the post and fix it to the worksurface.

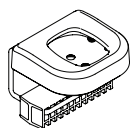

AWM-FC
C Clamp


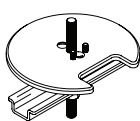


AC-GC
Grommet
Clamp

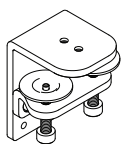

AWM-FH
Heavy Duty
F Clamp


1.2 Remove cable clips and covers from post by sliding up and out or by squeezing sides.

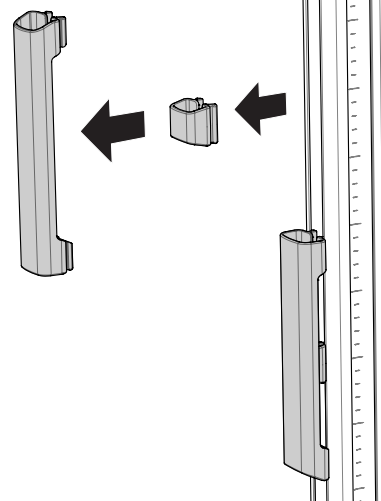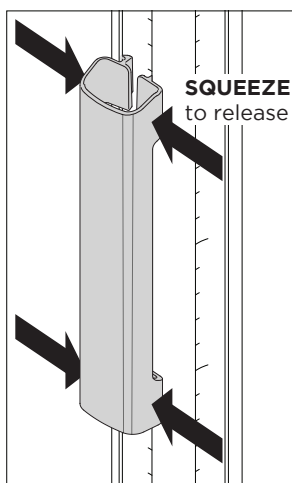

2. Attach VESA plate to display


NOTE: Some displays require the use of a VESA adapter before attaching the VESA plate. This VESA adapter may ship in the box with the display. Consult your display's installation guide for further information.

2.1 VESA compatibility

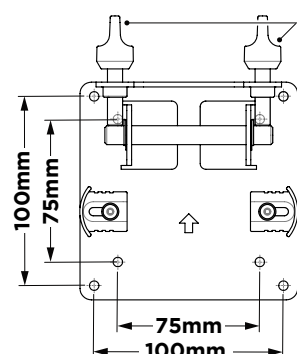


NOTE:
For 75mm
VESA
unscrew
5mm to
access
top holes

Option A - Attach VESA plate with M4x10 screws.

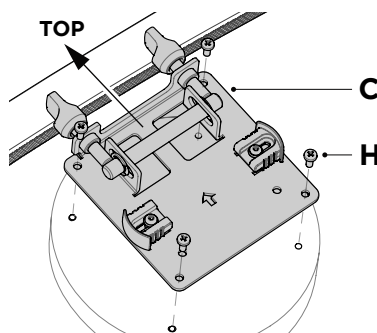


Option B - For recessed VESA use 10mm spacers and M4x20 screws.

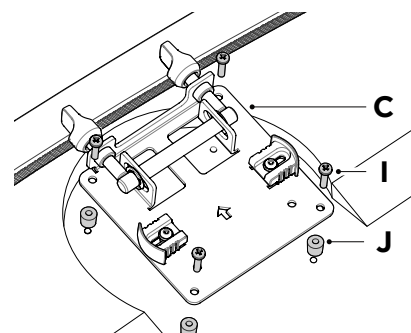


3. Slide bracket onto post

3.1 Tilt bracket must only be attached with display facing the front of the mounting surface unless fixing is AC-GC.

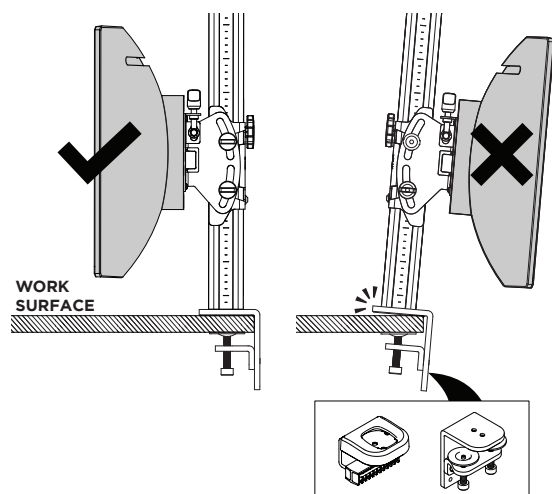


3.2 Line up the inner guide on rear of bracket with rear channel on post.

Slide inner guide into channel, then lower the bracket.

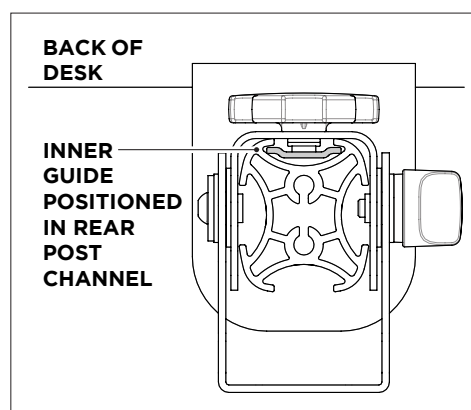


PLAN VIEW

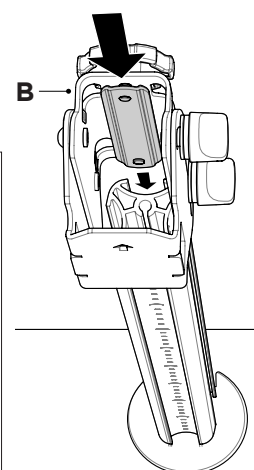


4. Set height

4.1 Ensure height is sufficient for display to clear desk once in place.

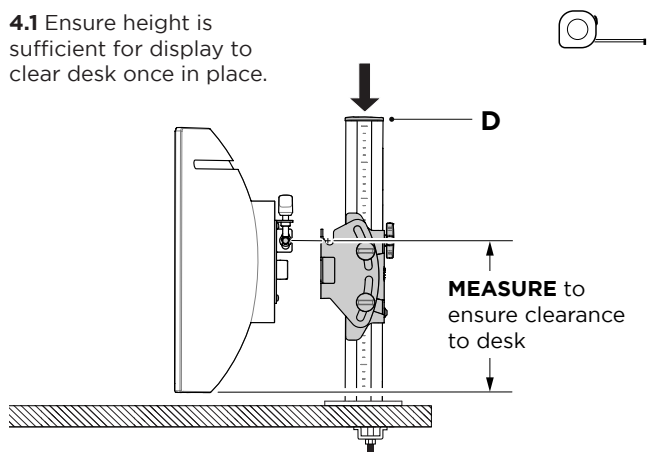

4.2 Firmly tighten hand knob at chosen height.

Fit post cap.

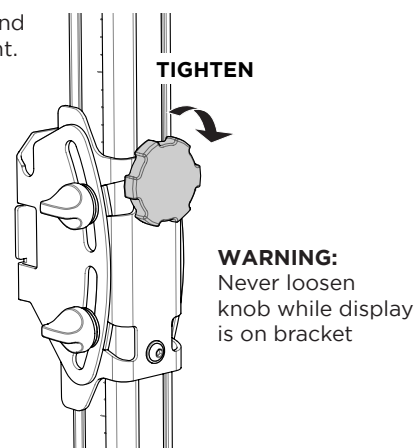


5. Attach display


5.1 Set VESA plate to **open** position.

WARNING:


Use two people to install display

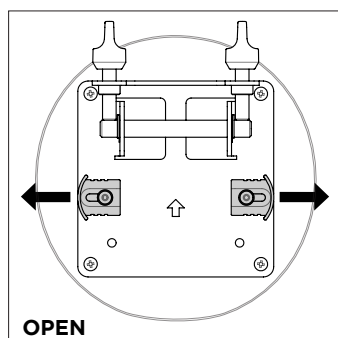


5.2 Lift display until VESA plate is above the bracket.

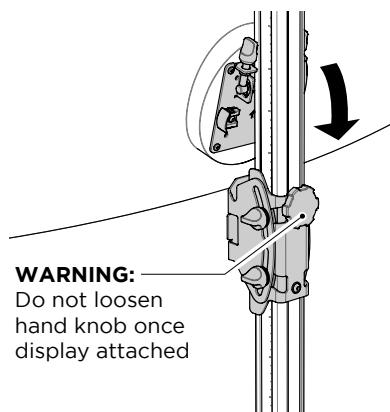


5.3 Centre VESA plate close to post and slowly lower until bar on VESA plate sits in saddle in bracket.

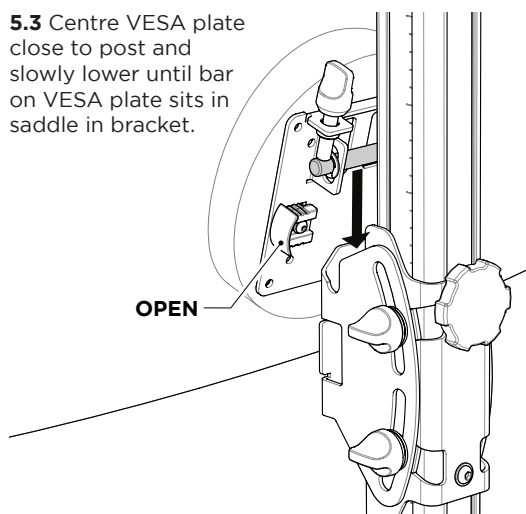


5.4 Set VESA plate to **closed** position by sliding clips on both sides inwards.

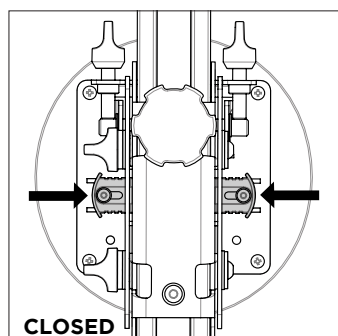

5.5 Adjust display tilt angle by gripping edges of screen and rolling up or down to desired position.

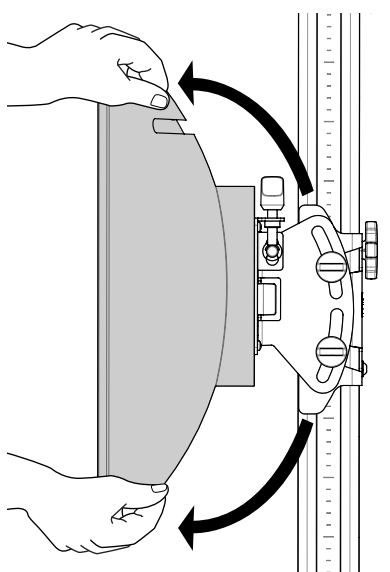


5.6 Set display angle by tightening both tilt knobs.

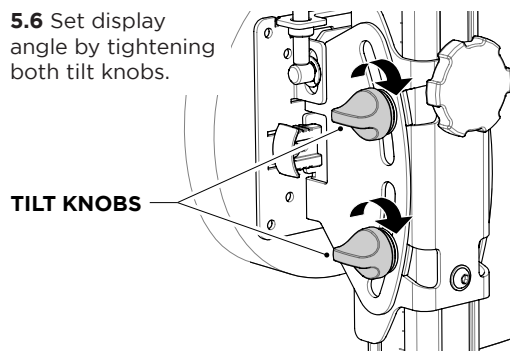




OPTIONAL ADJUSTMENT - TILT FRICTION

4mm hex key can be used to reduce tilt friction (for light screen) or increase tilt friction (for heavy screen)






Clockwise = More friction
Anticlockwise = Less friction

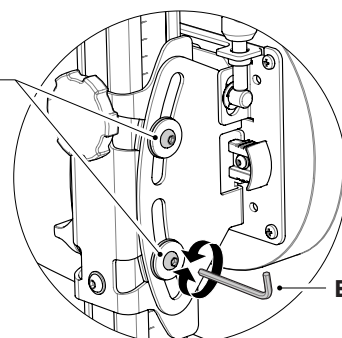

7. Fine adjustment

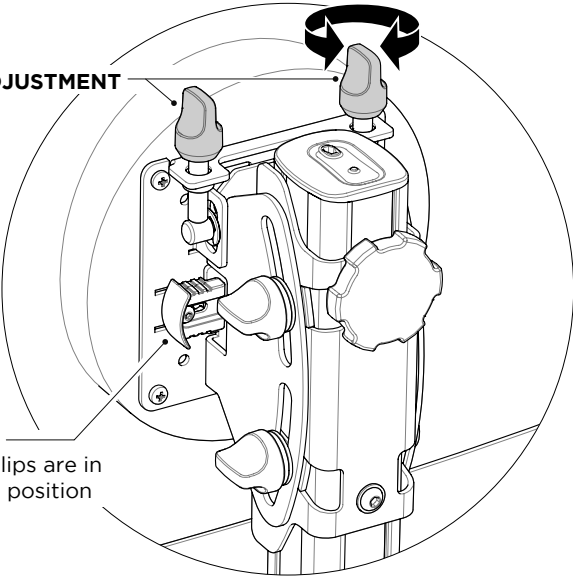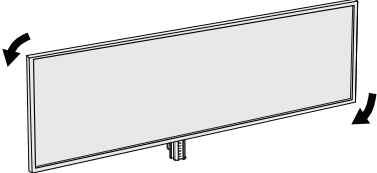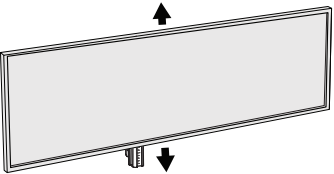 FINE ADJUSTMENT KNOBS NOTE: Ensure clips are in CLOSED position CLOCKWISE = HIGHER ANTI-CLOCKWISE = LOWER	7.1 To correct horizontal angle of display +/- 3°: Turn a single fine tune adjustment knob to adjust angle of screen. Micro adjustment - Levelling +/- 3° 
	7.2 To fine tune height without removing screen +/-6mm (1/4"): Turn both fine tune adjustment knobs - alternating sides a few rotations at a time. Micro adjustment - Fine tune height +/- 6mm (0.25") 

8. Cable management

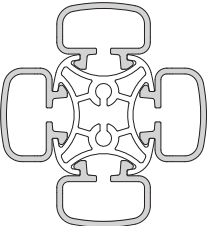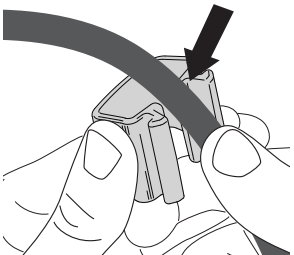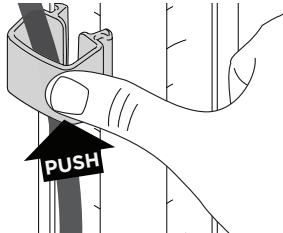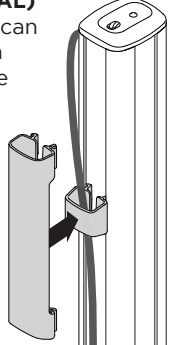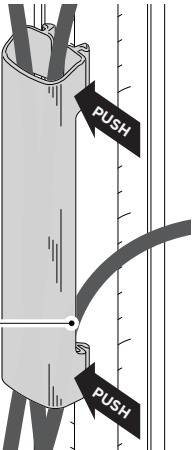8.1 Cable clips and covers can be clipped onto any post channel. The rear channel is recommended. 	CABLE CLIPS 8.2 Load cables into cable clip. 	8.3 Insert one side of the cable clip into a channel on the post, then push in the other side. 	8.4 (OPTIONAL) Cable covers can be clipped on over the cable clips. 
CABLE COVERS 8.5 Load cables into cable cover. HINT: Cable covers have greater cable capacity. 	8.6 Clip the cable cover onto post channel. Cables can exit from the side of the cable cover 	WARNING: Always remove display before adjusting height 